



BVJNR/L

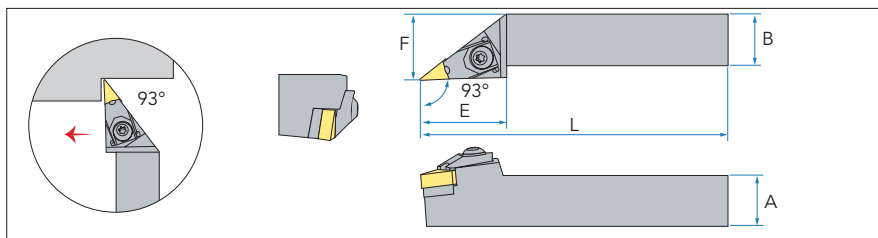

Обозначение	Размеры					Пластина							
	A	B	L	E	F		Подкл. пластина	Винт	Прижим	Винт	Кольцо	Ключ	
BVJNR/L2020K16	20	20	125	47	25	VN**1604	MV1603	CTM5-S	BV16	BCS06	CR05	L2.5 L3.0	
BVJNR/L2525M16	25	25	150	47	32								
BVJNR/L3232P16	32	32	170	47	40								

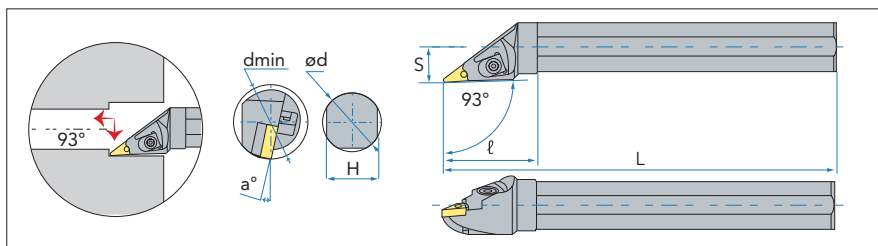

Обозначение	Размеры							Пластина						
	Ø D	Ø d	H	L	S	l	a°		Прижим	Винт	Винт	Скоба	Ключ	
S25R-BVJNR/L16	32	25	23	200	17	60	12°	VN**1604	BV16	CTM5-11	BCS06	CR05	L2.5 L3.0	
S32S-BVJNR/L16	40	32	30	350	22	60	17°							
S40T-BVJNR/L16	50	40	48	300	27	60	15°							

