



BWLNR/L

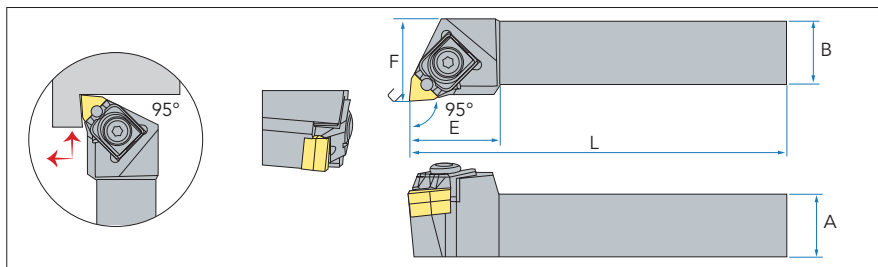

Обозначение	Размеры					Пластина						
	A	B	L	E	F		Подп. пластина	Винт	Прижим	Винт	Кольцо	Ключ
BWLNR/L1616H06	16	16	100	28	20	WN**0604	MW0603	CTM5-S	BW06	BCS08	CR05	L2.5 L3.0
BWLNR/L2020K06	20	20	125	28	25							
BWLNR/L2525M06	25	25	150	28	32							
BWLNR/L3232P06	32	32	170	32	40							
BWLNR/L2020K08	20	20	125	32	26	WN**0804	MW0804	CTM6-S	BW08		CR07	L3.0 L4.0
BWLNR/L2525M08	25	25	150	32	32							
BWLNR/L3232P08	32	32	170	32	40							



BWLNR/L

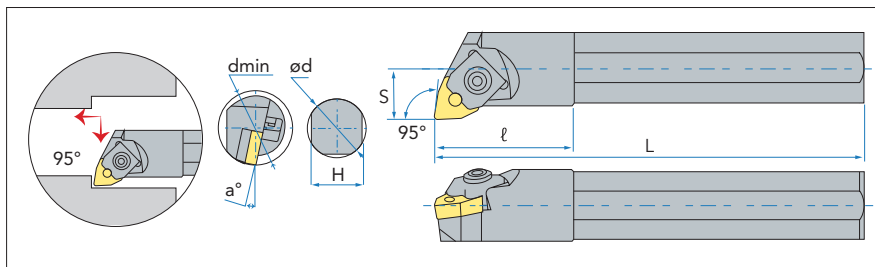

Обозначение	Размеры							Пластина						
	ØD	Ød	H	L	S	l	a°		Прижим	Винт	Подкл. пластина	Винт	Скоба	Ключ
S20R-BWLNR/L06	25	20	23	200	13	48	15°	WN**0604	BW06	CTM5-11	X	BCS06	CR05	L2.5
S25R-BWLNR/L06	32	25	18	200	17	48	13°		BW08N					L3.0
S25R-BWLNR/L08	32	25	23	200	17	48	13°	WN**0804		BW08	CTM6-N	WW08	BCS08	CR07
S25T-BWLNR/L08	32	25	23	300	17	48	13°		L3.0					
S32S-BWLNR/L08	40	32	30	250	22	50	17°		L3.0					
S32U-BWLNR/L08	40	32	30	350	22	50	17°		L3.0					
S40T-BWLNR/L08	50	40	38	300	27	50	15°		L3.0					
S40W-BWLNR/L08	50	40	38	450	27	50	15°		L4.0					
S50U-BWLNR/L08	60	50	48	350	31	50	12°		L3.0					
S50Y-BWLNR/L08	60	50	48	500	31	50	12°		L4.0					
S60V-BWLNR/L08	72	60	58	400	36	50	12°		L3.0					

