


## MVJNR/L

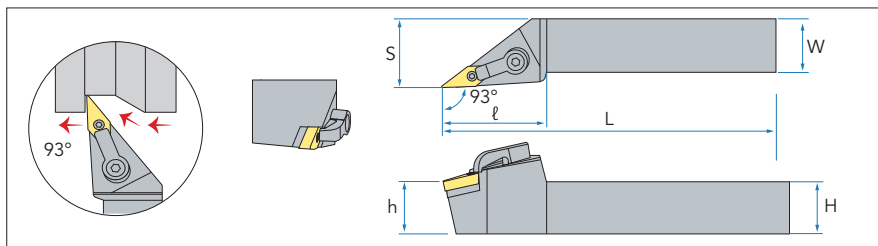

Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	H	W	L	l	h	s						
MVJNR/L1616K16	16	16	125	44	16	20	VN**1604	MV1603	СТМ513	HL2414	ML0625	L2.0 L3.0
MVJNR/L2020K16	20	20	125	44	20	25						
MVJNR/L2525M16	25	25	150	44	25	32						
MVJNR/L3232P16	32	32	170	46	32	40						

