



T90-CC

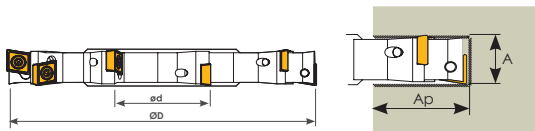

 


Обозначение	Склад	Размеры					Режущая пластина	Винт	Ключ
		D	A	Z	d	Ap			
T90-D80-27-8-11-10-CC	•	80	8	10	27	11	CCMT0602	TC063 M2,5x7	T08
T90-D100-32-8-24-12-CC	•	100	8	12	32	24			
T90-D125-40-8-32-14-CC	•	125	8	14	40	32			
T90-D160-40-8-50-16-CC	•	160	8	16	40	50			
T90-D200-40-8-65-18-CC	•	200	8	18	40	65			
T90-D80-27-10-11-10-CC	•	80	10	10	27	11			
T90-D100-32-10-24-12-CC	•	100	10	12	32	24			
T90-D125-40-10-32-14-CC	•	125	10	14	40	32			
T90-D160-40-10-50-16-CC	•	160	10	16	40	50			
T90-D200-40-10-65-18-CC	•	200	10	18	40	65			
T90-D80-27-12-11-8-CC	•	80	12	8	27	11	CCMT09T3	TC067 M3,5x9	T15
T90-D100-32-12-24-10-CC	•	100	12	10	32	24			
T90-D125-40-12-32-12-CC	•	125	12	12	40	32			
T90-D160-40-12-50-14-CC	•	160	12	14	40	50			
T90-D80-27-14-11-8-CC	•	80	14	8	27	11			
T90-D100-32-14-24-10-CC	•	100	14	10	32	24			
T90-D125-40-14-32-12-CC	•	125	14	12	40	32			
T90-D160-40-14-50-14-CC	•	160	14	14	40	50			
T90-D200-40-14-65-16-CC	•	200	14	16	40	65			
T90-D80-27-16-11-6-CC	•	80	16	6	27	11	CCMT1204	TC083 M5x12	T20
T90-D100-32-16-24-8-CC	•	100	16	8	32	24			
T90-D125-40-16-32-10-CC	•	125	16	10	40	32			
T90-D160-40-16-50-12-CC	•	160	16	12	40	50			
T90-D125-40-20-32-10-CC	•	125	20	10	40	32			



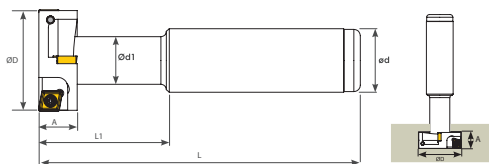T90-CC



Обозначение	Склад	Размеры							Режущая пластина	Винт	Ключ
		D	A	Z	d	d1	L	L1			
T90-D17-16-8-100-2-CC	●	17	8	2	16	10	100	30	CCMT0602		T08
T90-D21-16-9-100-2-CC	●	21	9	2	16	11	100	30			
T90-D25-20-11-100-4-CC	●	25	11	4	20	15	100	30			
T90-D32-20-12-100-4-CC	●	32	12	4	20	15	100	40			
T90-D35-25-15-100-4-CC	●	35	15	4	25	14	100	50	CCMT09T3		T15
T90-D40-25-17-110-4-CC	●	40	17	4	25	20	110	50			
T90-D50-32-20-110-4-CC	●	50	20	4	32	26	110	50	CCMT1204		T20
T90-D63-32-9-125-8-CC	●	63	9	8	32	20	125	37	CCMT0602		T8
T90-D80-32-9-120-10-CC	●	80	9	10	32	32	125	---			