



T90-SP

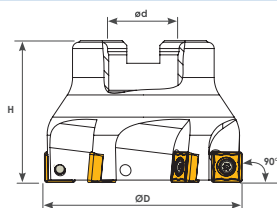

Обозначение	Склад	Размеры				Режущая пластина	Винт	Ключ
		D	d	Z	H			
T90-D50-05-22R-SP	•	50	22	5	45	SPMG0904	TC067 M3,5x8,5	T15
T90-D63-06-22R-SP	•	63	22	6	45			
T90-D80-07-27R-SP	•	80	27	7	52			

T90-SP

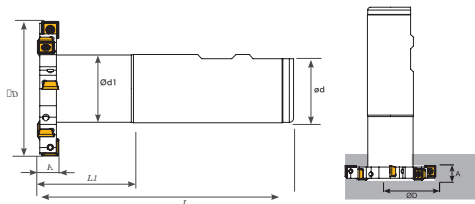

Обозначение	Склад	Размеры							Режущая пластина	Винт	Ключ
		D	A	Z	d	d1	L	L1			
T90-D50-32-5-120-7-SP	•	50	5	7	32	31.5	120	45	SPMG05	TC058 M2x4,5	T6
T90-D63-32-5-120-8-SP	•	63	5	8	32	31.5	120	45			
T90-D50-32-6-120-7-SP	•	50	6	7	32	31.5	120	45	SPMG06	TC059 M2,2x5	T7
T90-D63-32-6-120-8-SP	•	63	6	8	32	31.5	120	45			
T90-D80-32-6-120-10-SP	•	80	6	10	32	31.5	120	45			
T90-D50-32-8-120-6-SP	•	50	8	6	32	31.5	120	45			
T90-D63-32-8-120-8-SP	•	63	8	8	32	31.5	120	45			
T90-D80-32-8-120-10-SP	•	80	8	10	32	31.5	120	45	SPMG07	TC060 M2,5x5,5	T8
T90-D50-32-10-120-6-SP	•	50	10	6	32	31.5	120	45			
T90-D63-32-10-120-8-SP	•	63	10	8	32	31.5	120	45			
T90-D80-32-10-120-10-SP	•	80	10	10	32	31.5	120	45			

