



## WWLNR/L

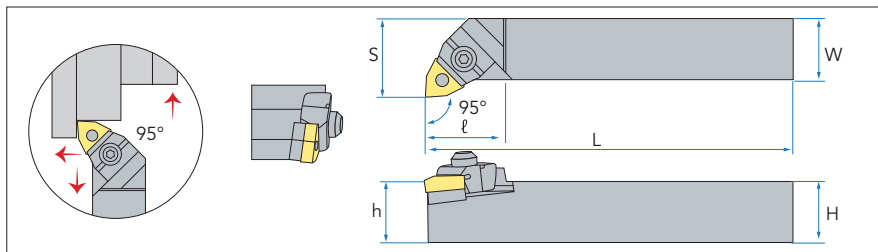

Обозначение	Размеры						Пластина						
	H	W	L	l	h	s		Прижим	Винт	Кольцо	Подкл. пластина	Винт	Ключ
WWLNR/L1616K08	16	16	125	32	16	22	WN**0804	YW08	WTCW	KH540	WW08	STM6-S	L3.0 L4.0
WWLNR/L2020K08	20	20	125	32	20	26							
WWLNR/L2525M08	25	25	150	35	25	32							
WWLNR/L3232P08	32	32	170	35	32	40							

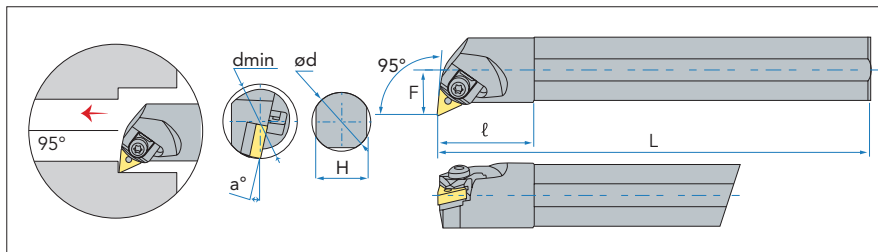

Обозначение	Размеры						Пластина						
	d <sub>min</sub>	Ø d	L	l	F	α°		Прижим	Винт	Кольцо	Подкл. пластина	Винт	Ключ
S25R-WWLNR/L16	Ø32	25	200	47	17	13°	TN**1604	WT16N	WTCW	KH540	X	STM5-11	L2.5 L4.0
S32S-WWLNR/L16	Ø40	32	250	54	22	17°		WT16			MT16-S	STM5-S	