



BCLNR/L

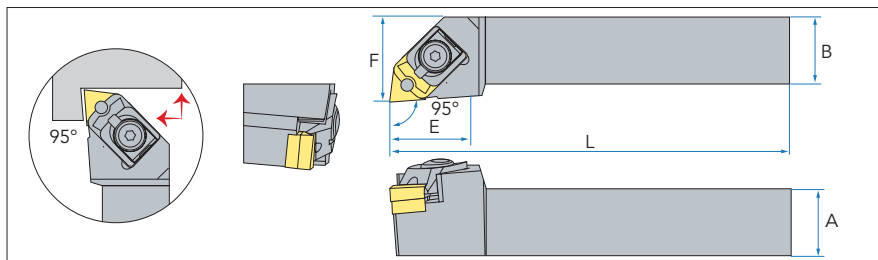

Обозначение	Размеры					Пластина	Подкл. пластина	Винт	Прижим	Винт	Кольцо	Ключ
	A	B	L	E	F							
BCLNR/L2020K12	20	20	125	32	25	CN**1204	MC1204	CTM6-S	BC12	BCS08	CR07	L3.0 L4.0
BCLNR/L2525M12	25	25	150	37	32							
BCLNR/L3232P12	32	32	170	36	40							
BCLNR/L3232P16	32	32	170	38	40	CN**1606	MC1604	CTM8-S				

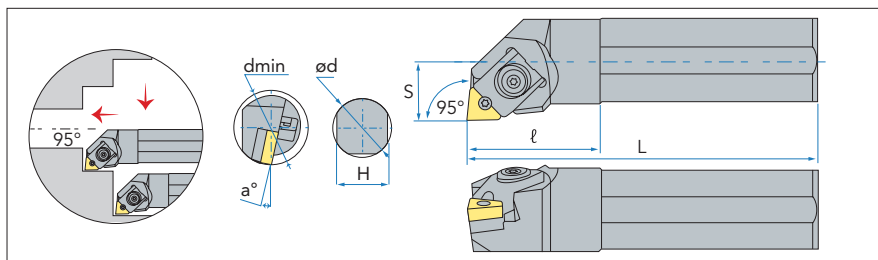

Обозначение	Размеры							Пластина	Подкл. пластина	Винт	Прижим	Винт	Кольцо	Ключ
	ØD	Ød	H	L	S	l	a°							
S25T-BCLNR/L12	30	25	23	300	17	50	13°	CN**1204	BC12	CTM6-N	X	BCS08	CR07	L3.0 L4.0
S25R-BCLNR/L12	30	25	23	200	17	50	13°							
S32S-BCLNR/L12	40	32	30	250	22	50	17°							
S32U-BCLNR/L12	40	32	30	350	22	50	17°							
S40T-BCLNR/L12	50	40	38	300	27	50	15°							
S40W-BCLNR/L12	50	40	38	450	27	50	15°							
S50U-BCLNR/L12	60	50	48	350	31	50	12°							
S50Y-BCLNR/L12	60	50	48	500	31	50	12°							

