



MCKNR/L

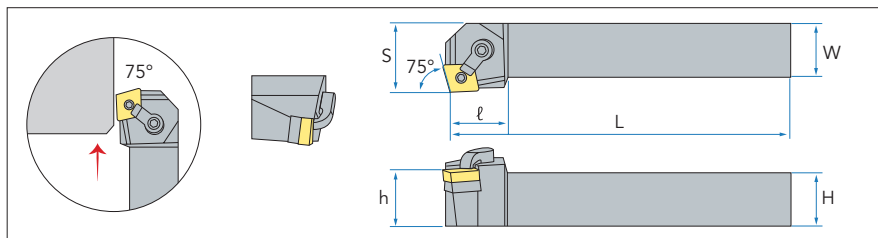

Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	H	W	L	l	h	s						
MCKNR/L2020K12	20	20	125	28	20	25	CN**1204	MC1204	CTM617	HL1814	ML0625	L2.5 L3.0
MCKNR/L2525M12	25	25	150	28	25	32						
MCKNR/L3232P12	32	32	170	35	32	40						
MCKNR/L3232P16	32	32	170	35	32	40	CN**1606	MC1604	CTM822	HL2217	ML0830	L3.0; L4.0
MCKNR/L3232P19	32	32	170	38	32	40	CN**1906	MC1904	CTM1022			L4.0

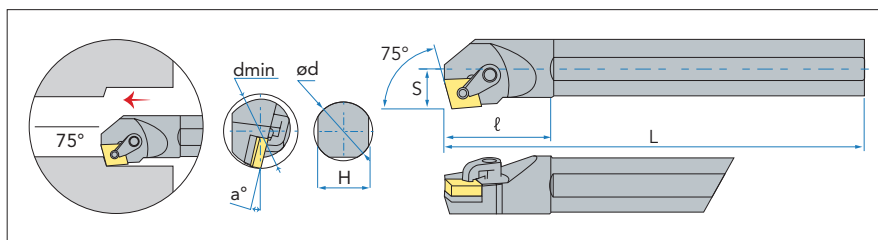

Обозначение	Размеры							Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	dmin	ød	S	L	l	H	a°						
S20Q-MCKNR/L12	Ø30	20	14	180	45	18	15°	CN**1204	X	CTM613	HL1812	ML0622	L2.5 L3.0
S25R-MCKNR/L12	Ø34	25	17	200	45	23	13°						
S32S-MCKNR/L12	Ø40	32	22,5	250	50	30	17°		MC1204	CTM617	HL1814	ML0625	
S40T-MCKNR/L12	Ø52	40	26	300	55	38	15°						
S50U-MCKNR/L12	Ø62	50	31	350	70	48	12°						