



## MSKNR/L

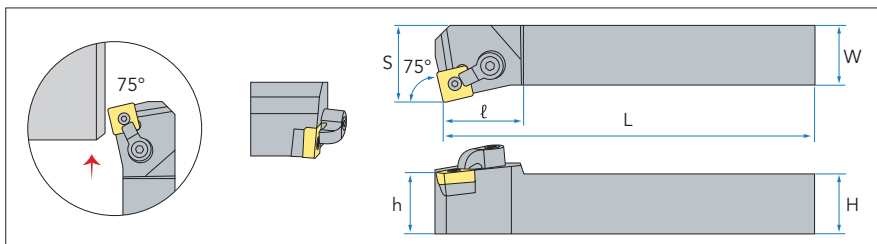

Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	H	W	L	l	h	s						
MSKNR/L2020K12	20	20	125	29	20	25	SN**1204	MS1204	CTM617	HL1814	ML0625	L2.5 L3.0
MSKNR/L2525M12	25	25	150	29	25	32	SN**1506	MS1504	CTM822	HL2217	ML0830	L3.0 L4.0
MSKNR/L2525M15	25	25	150	33	25	32						
MSKNR/L3232P15	32	32	170	35	32	40	SN**1906	MS1904	CTM1022			
MSKNR/L3232P19	32	32	170	35	32	40						
MSKNR/L4040R19	40	40	200	38	40	50						

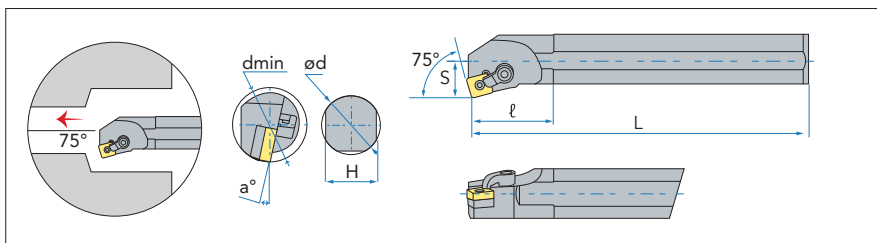

Обозначение	Размеры							Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	dmin	Ø d	S	L	l	H	a°						
S20Q-MSKNR/L12	Ø28	20	13	180	45	18	15°	SN**1204	X	CTM613	HL1812	ML0622	L2.5 L3.0
S25R-MSKNR/L12	Ø34	25	17	200	45	23	13°						
S32S-MSKNR/L12	Ø44	32	22	250	50	30	17°		MS1204	CTM617	HL1814	ML0625	
S40T-MSKNR/L12	Ø54	40	27	300	45	38	15°						
S50U-MSKNR/L12	Ø62	50	34	350	70	48	12°						

