



MSSNR/L

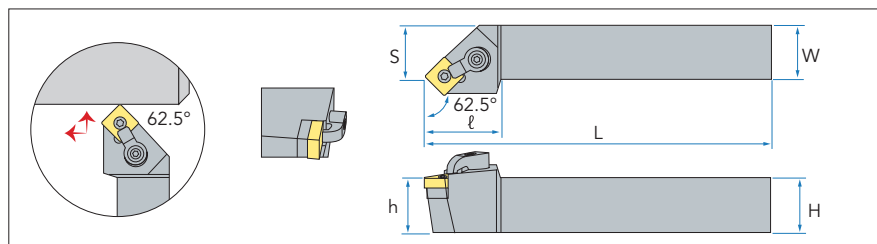

Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	H	W	L	l	h	s						
MSSNR/L2020K12	20	20	125	33	20	25	SN**1204	MS1204	CTM617	HL1814	ML0625	L2.5 L3.0
MSSNR/L2525M12	25	25	150	35	25	32						
MSSNR/L3232P12	32	32	170	35	32	40						
MSSNR/L2525M15	25	25	150	41	25	32	SN**1506	MS1504	CTM822	HL2217	ML0830	L3.0 L4.0
MSSNR/L3232P15	32	32	170	42	32	40						
MSSNR/L3232P19	32	32	170	45	32	40	SN**1906	MS1904	CTM1022			L4.0
MSSNR/L4040R19	40	40	200	45	40	50						

MTBNR/L

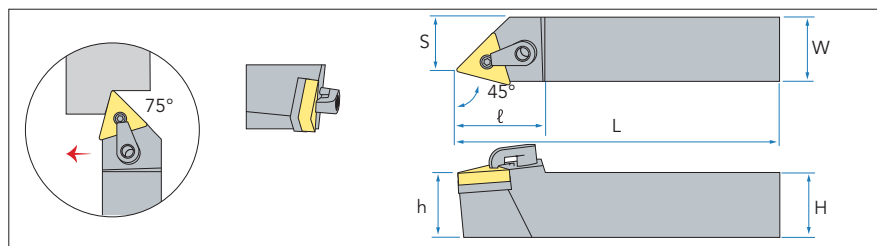

Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Прижим	Винт	Ключ
	H	W	L	l	h	s						
MTBNR/L2020K16	20	20	125	34	20	15,5	TN**1604	MT1603	CTM513	HL1814	ML0625	L2.0 L3.0
MTBNR/L2525M16	25	25	150	34	25	20,5						