





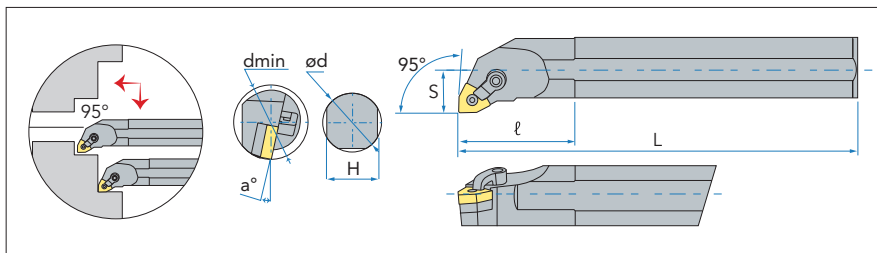


MWLNR/L

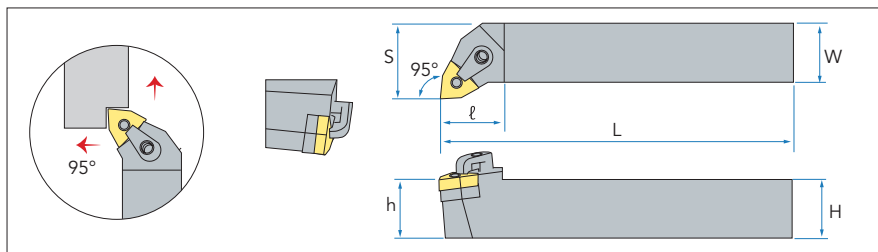

Обозначение	Размеры						Пластина	 Подп. пластина	 Винт	 Прижим	 Винт	 Ключ
	H	W	L	l	h	s						
MWLNR/L1616H06	16	16	100	27	16	20	WN**0604	MW0603	CTM513			L2.0 L3.0
MWLNR/L2020K06	20	20	125	27	20	25						
MWLNR/L2525M06	25	25	150	27	25	32	WN**0804	MW0804	CTM617	HL1814	ML0625	L2.5 L3.0
MWLNR/L1616H08	16	16	100	27	16	20						
MWLNR/L2020K08	20	20	125	28	20	25						
MWLNR/L2525M08	25	25	150	30	25	32						
MWLNR/L3232P08	32	32	170	30	32	40						
MWLNR/L4040R08	40	40	200	38	40	50						

MWLNR/L



Обозначение	Размеры							Пластина					
	dmin	Ød	S	L	ℓ	H	a°		Подкл. пластина	Винт	Прижим	Винт	Ключ
S16Q-MWLNR/L06	Ø25	16	11	180	38	15	17°	WN**0604	X	CTM510	HL1511	ML0519	L2.0 L2.5
S20Q-MWLNR/L06	Ø30	20	13	180	42	18	15°				HL1814	ML0625	L2.0;L3.0
S25R-MWLNR/L06	Ø34	25	17	200	45	23	13°	WN**0804	MW0804	CTM613	HL1812	ML0622	L2.5 L3.0
S20Q-MWLNR/L08	Ø30	20	13	180	40	18	15°				HL1814	ML0625	
S25R-MWLNR/L08	Ø34	25	17	200	45	23	13°	WN**0804	MW0804	CTM617	HL1814	ML0625	L2.5 L3.0
S32S-MWLNR/L08	Ø44	32	22	250	50	30	17°						
S40T-MWLNR/L08	Ø52	40	27	300	55	38	15°	WN**0804	MW0804	CTM617	HL1814	ML0625	L2.5 L3.0
S50U-MWLNR/L08	Ø62	50	31	350	60	48	12°						