



PWLNR/L

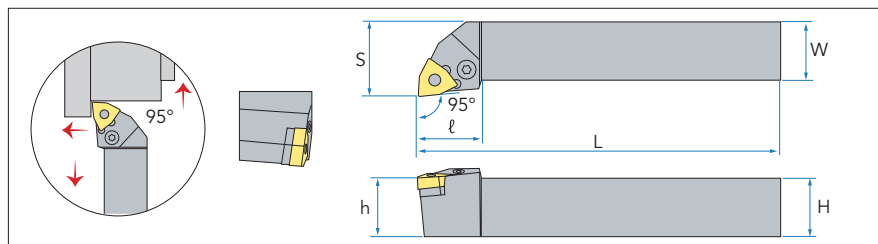

Обозначение	Размеры						Пластина	Подкл. пластина	Рычаг	Винт	Скоба	Ключ	
	H	W	L	l	h	s							
PWLNR/L1616H06	16	16	100	20	16	20	WN**0604	SW317	LV3	VHX0617	SP3	L2.5	
PWLNR/L2020K06	20	20	125	26	20	25							
PWLNR/L1616H08	16	16	100	26	16	20	WN**0804	SW42	LV4	VHX0821	SP4	L3.0	
PWLNR/L2020K08	20	20	125	28	20	25							
PWLNR/L2525M08	25	25	150	27	25	32							

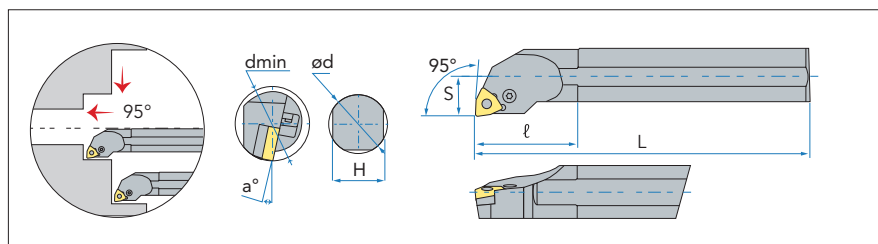

Обозначение	Размеры							Пластина	Подкл. пластина	Рычаг	Винт	Скоба	Ключ	
	Ø D	Ø d	H	L	S	l	a°							
S200-PWLNR/L06	26	20	18	180	13	40	15°	WN**0604	LV3B	VHX0512B	X	X	L2.0	
S25R-PWLNR/L06	34	25	23	200	17	45	12°							
S32S-PWLNR/L06	44	32	30	250	22	45	10°	WN**0804	LV3	VHX0613B	SW317	SP3	L2.5	
S25R-PWLNR/L08	34	25	23	200	17	45	12°							
S32S-PWLNR/L08	44	32	30	250	22	50	13°							