



SER/L



Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Винт	Ключ
	H	W	L	S	h	l					
SER/L1212F11	12	12	80	14	12	15	11ER/L**	X	M2.5*8	X	T8
SER/L1212F16	12	12	80	16	12	22			M3.5*9		
SER/L1616H16	16	16	100	20	16	22	16ER/L**	STM16	M3.5*12	M3*6N	T15
SER/L2020K16	20	20	125	25	20	27					
SER/L2525M16	25	25	150	32	25	30					
SER/L3232P16	32	32	170	40	32	32					
SER/L2525M22	25	25	150	32	25	31	22ER/L**	STM22R	M4*16	M4*6N	T20
SER/L3232P22	32	32	170	40	32	31		STM22L			
SER/L4040R22	40	40	200	50	40	31	27ER/L**	STM27	M5*20		
SER/L3232P27	32	32	170	40	32	33,5					
SER/L4040R27	40	40	200	50	40	33,5					

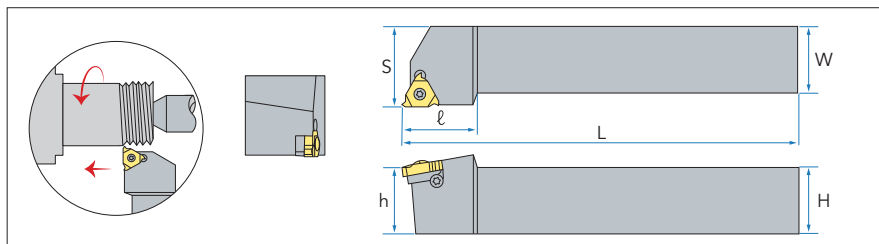

SNR/L

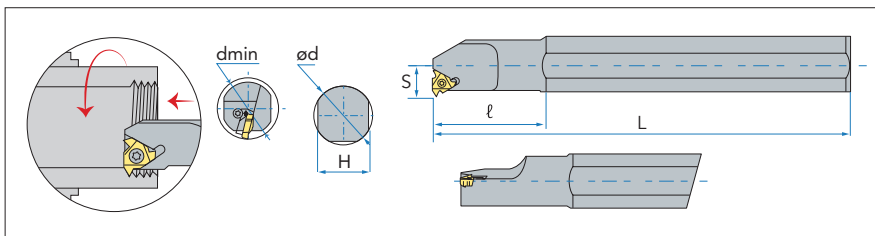

Обозначение	Размеры						Пластина	Подкл. пластина	Винт	Винт	Ключ							
	dmin	ФD	H	L	S	l												
SNR/L0008K08	9,9	8	7	125	5,5	20	08IR/L**	X	M2.2*5	X	T6							
SNR/L0010K11	13	10	9	125	7,3	25	11IR/L** 16IR/L**		M2.5*6		T8							
SNR/L0010K11-A16	13	16	15	125	6,5	30						M3.5*9	T15					
SNR/L0012K11	15	12	11	125	8,2	28								M3.5*12	M3*6N			
SNR/L0012K11-A16	15	16	15	125	7,4	36										STM16	T15	
SNR/L0013M16	17	16	15	150	9,4	32												M4*12-S22
SNR/L0016Q16	20	16	15	180	11,7	40				M4*16								
SNR/L0020Q16	24	20	18	180	13,7	40			STM22R/L		T20							
SNR/L0025R16	29	25	23	200	16,2	45						M5*20	T20					
SNR/L0032S16	36	32	30	250	19,7	50								27IR/L**	T20			
SNR/L0040T16	44	40	38	300	23,1	55										STM27	T20	
SNR/L0050U16	56	50	48	350	28,7	60												M5*20
SNR/L0020Q22	27	20	18	180	14,9	40		27IR/L**		T20								
SNR/L0025R22	32	25	23	200	18,1	45	M5*20		T20									
SNR/L0032S22	39	32	30	250	21,5	50					M5*20	T20						
SNR/L0040T22	47	40	38	300	25,6	55							M5*20	T20				
SNR/L0050U22	57	50	48	350	30,6	70									M5*20	T20		
SNR/L0032S27	40	32	30	250	22,4	60											M5*20	T20
SNR/L0040T27	48	40	38	300	26,4	60		M5*20		T20								
SNR/L0050U27	58	50	48	350	32,3	70	M5*20		T20									

