





SCLCR/L

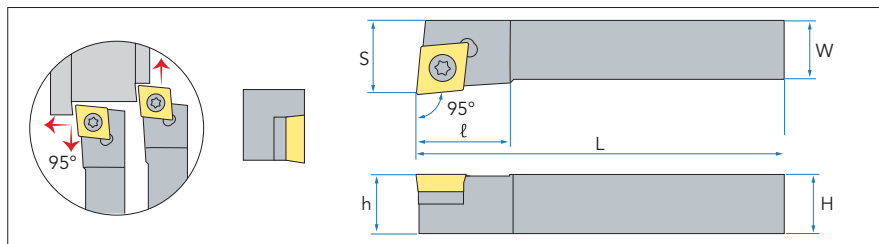

Обозначение	Размеры						Пластина	 Винт	 Ключ
	H	W	L	l	h	s			
SCLCR/L0808F06	8	8	80	12	8	10	CC**0602	M2.5*6	T8
SCLCR/L1010F06	10	10	80	12	10	12			
SCLCR/L1212F09	12	12	80	16	12	16	CC**09T3	M3.5*9	T15
SCLCR/L1616H09	16	16	100	16	16	20			
SCLCR/L2020K09	20	20	125	16	20	25			
SCLCR/L2525M09	25	25	150	16	25	32			
SCLCR/L2020K12	20	20	125	20	20	25	CC**1204	M5*12	T20
SCLCR/L2525M12	25	25	150	20	25	32			
SCLCR/L3232P12	32	32	170	20	32	40			

SCLCR/L

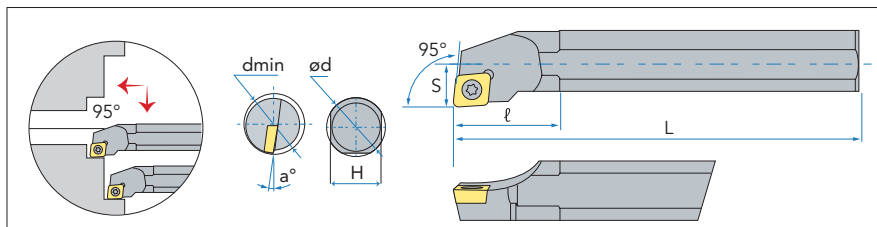

Обозначение	Размеры							Пластина	Винт	Ключ
	ØD	Ød	H	L	S	ℓ	α°			
S07K-SCLCR/L06	Ø9	8	4,2	125	18	7	15°	CC**0602	M2.5*5	T8
S08K-SCLCR/L06	Ø10	8	5	125	18	7	13°			
S08K-SCLCR/L06-A16	Ø10	16	5	125	24	15	13°			
S10K-SCLCR/L06	Ø12	10	6	125	22	9	12°			
S10K-SCLCR/L06-A16	Ø12	16	6	125	30	15	12°			
S12M-SCLCR/L06	Ø14	12	7	150	25	11	10°			
S12M-SCLCR/L09	Ø15	12	8	150	30	11	12°	CC**09T3	M3.5*9	T15
S14M-SCLCR/L09	Ø16	14	8	150	30	13	12°			
S16Q-SCLCR/L09	Ø19	16	9,5	180	34	15	10°			
S20Q-SCLCR/L09	Ø23	20	11,5	180	38	18	8°			
S25R-SCLCR/L09	Ø28	25	14	200	45	23	6°			
S32S-SCLCR/L09	Ø36	32	18	250	45	30	6°			
S20Q-SCLCR/L12	Ø24	20	12	180	42	18	8°	CC**1204	M5*12	T20
S25R-SCLCR/L12	Ø34	25	14,5	200	45	23	5°			
S32S-SCLCR/L12	Ø36	32	18	250	45	30	6°			
S40T-SCLCR/L12	Ø44	40	22	300	48	38	4°			

Обозначение	Размеры									Пластина	Std corner-R3(r)	Винт	Ключ
	dmin	ΦD	H	L1	L2	L3	L4	F	α°				
S08K-SCLCR/L06-AV	Ø10	8	7	125	18	20	19	5	12°	CC**0602	0,4	M2.5*5	T8
S10K-SCLCR/L06-AV	Ø12	10	9	125	20	25	21	6	12°				
S12M-SCLCR/L06-AV	Ø14	12	11	150	27	30	28	7	10°				
S16Q-SCLCR/L09-AV	Ø18	16	15	180	30	34	31	9,5	10°	CC**09T3	M3.5*9	T15	
S20R-SCLCR/L09-AV	Ø24	20	19	200	42	49	43	13	7°				
S25S-SCLCR/L09-AV	Ø27	25	24	250	46	55	46	13,5	6°				