





## SDQCR/L



Обозначение	Размеры						Пластина	 Винт	 Ключ
	H	W	L	l	h	s			
SDQCR/L1010F07	10	10	80	5	10	12	DC**0702	M2.5*6	T8
SDQCR/L1212F07	12	12	80	13	12	16			
SDQCR/L1212F11	12	12	80	14	12	16			
SDQCR/L1616H11	16	16	100	14	16	20	DC**11T3	M3.5*9	T15
SDQCR/L2020K11	20	20	125	16	20	25			
SDQCR/L2525M11	25	25	150	22	25	32			

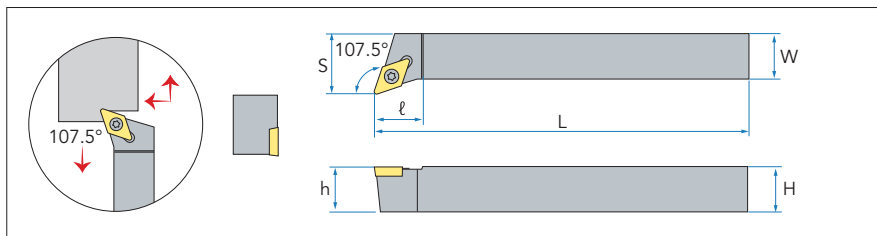

# SDQCR/L

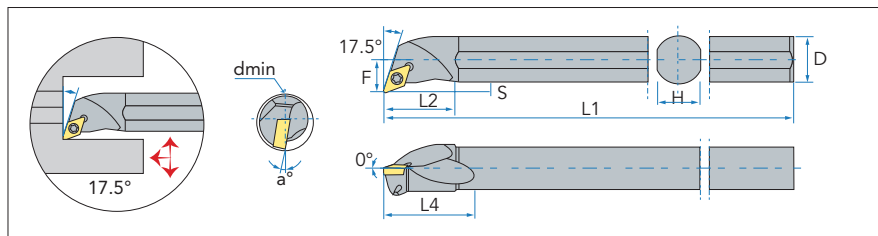

Обозначение	Размеры								Пластина	Винт	Ключ
	dmin	ФD	S	L	l	H	f	a°			
S08K-SDQCR/L07	Ø12	8	6	125	22	7	1,7	12°	DC**0702	M2.5*5	T8
S10K-SDQCR/L07	Ø13	10	7	125	24	9	1,7	10°			
S12M-SDQCR/L07	Ø16	12	9	150	30	11	2,7	8°		M2.5*6	
S16Q-SDQCR/L07	Ø20	16	11	180	30	15	2,7	6°			
S20Q-SDQCR/L07	Ø25	20	13	180	42	18	2,7	6°			
S16Q-SDQCR/L11	Ø20	16	11	180	32	15	3	8°	DC**11T3	M3.5*9	T15
S20Q-SDQCR/L11	Ø25	20	13	180	42	18	2,7	6°			
S25R-SDQCR/L11	Ø32	25	17	200	42,5	23	4	5°			
S32S-SDQCR/L11	Ø40	32	22	250	45	30	5,5	4°			

Обозначение	Размеры									Пластина	Std corner-R3(r)	Винт	Ключ	
	dmin	ФD	H	L1	L2	L3	L4	F	a°					
S10K-SDQCR/L07-AV	Ø13	10	9	125	24	2,1	20	7	10°	DC**0702	0,4	M2.5*6	T8	
S12M-SDQCR/L07-AV	Ø16	12	11	150	27	2,6	24	9	8°					
S16Q-SDQCR/L11-AV	Ø20	16	15	180	34	2,6	30	11	8°	DC**11T3		M3.5*9		T15
S20R-SDQCR/L11-AV	Ø24	20	19	200	40	3,7	37	13	6°					
S25S-SDQCR/L11-AV	Ø30	25	23	250	45	3,7	46	16,9	4°					