





## SVUBR/L

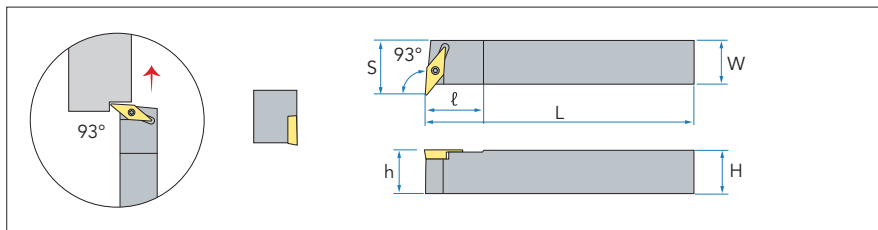

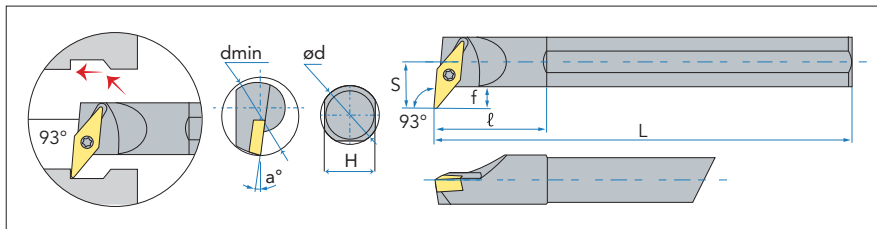

Обозначение	Размеры						Пластина	 Винт	 Ключ
	H	W	L	ℓ	h	s			
SVUBR/L1212H11	12	12	100	14	12	20	VB**1103	M2.5*8	T8
SVUBR/L1616H11	16	16	100	14	16	20			
SVUBR/L2020K16	20	20	125	18	20	30	VB**1604	M3.5*9	T15
SVUBR/L2525M16	25	25	150	18	25	35			

# SVUBR/L



Обозначение	Размеры								Пластина		
	dmin	Ø d	S	L	l	H	f	a°			
S16Q-SVUBR/L11	Ø22	16	12	180	40	15	3,2	10°	VB**1103	M2.5*6	T8
S20Q-SVUBR/L11	Ø27	20	14	180	42	18	3,7	8°			
S20R-SVUBR/L16	Ø34	20	19	200	47	18	8,5	8°	VB**1604	M3.5*9	T15
S25R-SVUBR/L16	Ø36	25	20	200	47	23	7	6°			
S32S-SVUBR/L16	Ø40	32	22,5	200	42	30	6,5	6°			
S40T-SVUBR/L16	Ø50	40	27	300	55	38	6,5	6°			

Обозначение	Размеры									Пластина	Std corner R3(r)		
	dmin	ФD	H	L1	L2	L3	L4	F	a°				
S10K-SVQCR/L08-AV	Ø14	10	9	125	24	21	8,5	3	8°	VC**0802	0,4	M2*5	T6
S12M-SVUCR/L08-AV	Ø18	12	11	150	25,5	32	11,5	5,5	8°	VC**0802	0,4	M2*5	T6