



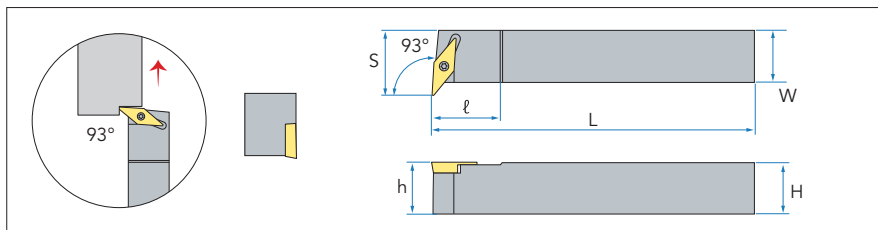

SVUCR/L

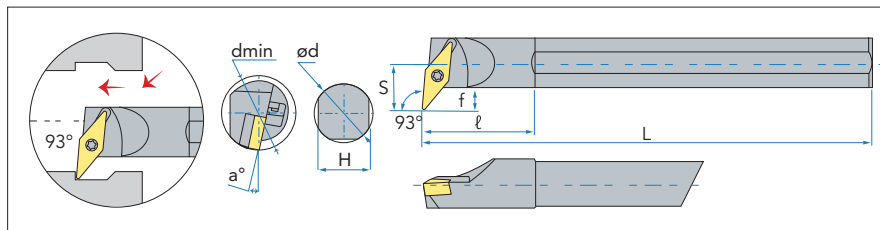

Обозначение	Размеры						Пластина	 Винт	 Ключ
	H	W	L	l	h	s			
SVUCR/L1212H11	12	12	100	14	12	20	VC**1103	M2.5*8	T8
SVUCR/L1616H11	16	16	100	14	16	20			
SVUCR/L2020K16	20	20	125	18	20	30	VC**1604	M3.5*9	T15
SVUCR/L2525M16	25	25	150	18	25	35			

SVUCR/L



Обозначение	Размеры								Пластина	 Винт	 Ключ
	dmin	ø d	S	L	l	H	f	a°			
S16Q-SVUCR/L11	Ø20	16	11,5	180	30	15	3,2	10°	VC**1103	M2.5*6	T8
S20Q-SVUCR/L11	Ø25	20	14	180	30	18	3,7	8°		M2.5*8	
S20R-SVUCR/L16	Ø29	20	19	200	45	18	8,5	8°	VC**1604	M3.5*9	T15
S25R-SVUCR/L16	Ø36	25	20	200	47	23	7	6°			
S32S-SVUCR/L16	Ø42	32	22,5	250	45	30	5,5	6°			
S40T-SVUCR/L16	Ø50	40	27	300	55	38	6,5	6°			

Обозначение	Размеры									Пластина	Std. corner R3(r)	 Винт	 Ключ
	dmin	ФD	H	L1	L2	L3	L4	F	a°				
S16Q-SVUBR/L11-AV	Ø22	16	15	180	37	27	12	8	10°	VB**1103		M2.5*6	T8
S20R-SVUBR/L11-AV	Ø31	20	18	200	45	31	19	8	8°			M2.5*8	
S25S-SVUBR/L16-AV	Ø34	25	23	250	47	37	20,5	8,5	7°	VB**1604		M3.5*9	T15
S32S-SVUBR/L16-AV	Ø44	32	30	250	90	47	28	12	6°				